


XTREM SERIE 1630

User Manual

GENERAL DESCRIPTION

MIYOTA quartz movement Caliber OS62

Functions : Hours, minutes, seconds, chronograph and date.

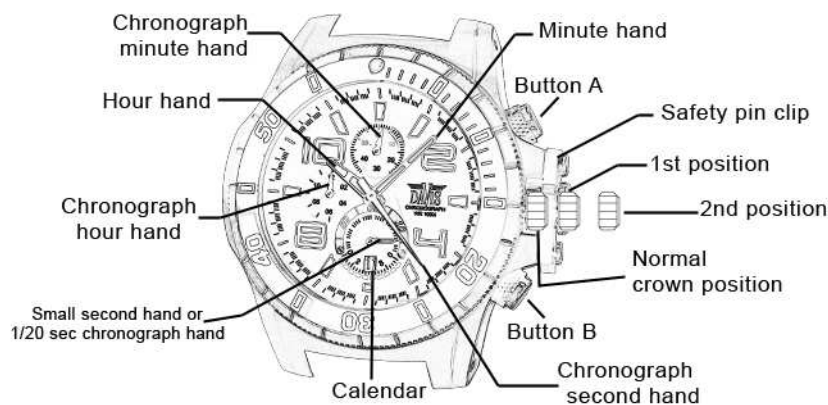

GENERAL USE

For settings unlock the safety pin clip.

Setting the time

Pull the crown out to the 2nd position.

The small second hand stops and moves to "60" of the counter

Adjust the hour by turning the crown in the desired direction.

When the crown is pushed back to the normal position, small second hand begins to run.

Setting the date

Pull the crown out to the 1st position.

Turn the crown anticlockwise to set the date.

When the date is correctly set push back the crown on normal position. Important : Date setting MUST UNDER NO CIRCUMSTANCES be carried out between 22.00 h (10 P.M.) and 2.00 h (2 A.M.).

Use of the chronograph

This chronograph is able to measure and display time in 1/20 second united up to maximum of 11 hours 59 minutes 59 seconds.

Measuring time with chronograph

Button A :

1st pressure : sets off the time measurement. Chronograph second hand begins to run. Small second hand moves to "0" of the counter and changes to the chronograph 1/20 second mode. 2nd pressure : stops the time measurement. Chronograph hand second and 1/20 second hand stop.

Button B :

(To use only when the chronograph has stopped).

1st pressure reset the chronograph hand second and 1/20 second hand to zero.

2nd pressure change the 1/20 second mode to the second mode.

Resetting the starting position of the chronograph second hand

Pull the crown out to the 2nd position.

Push button A to set position of the chronograph second hand.

Once the hand has been set push back the crown on normal position.

Resetting the starting position of the chronograph 1/20 second hand

(only if the hand isn't set to "60" after replacing battery)

Pull the crown out to the 2nd position.

Push button B to set the Chronograph 1/20 second hand to "60".

Once the hand has been set push back the crown on normal position

Water resistance

Your watch is waterproof 100 meters. Once the setting finished, push the crown back, lock the safety pin clip in order to guarantee perfect water resistance. The crown and buttons must never be handled under water.

Maintenance

It is advisable to rinse the watch and its strap carefully with fresh water after contact with sea water. It also recommended that the water resistance of your watch is serviced every two years.